


How to Measure

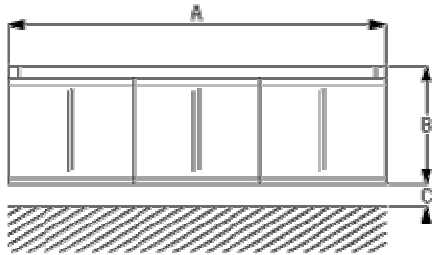

A: system width

B: system drop

C: 15mm recommended clearance

$B + C = \text{Total floor to ceiling drop}$